SHUTTLE TANKER ADVISORY

SEPTEMBER 2019



TABLE OF CONTENTS

INTRODUCTION	I
SECTION 1 - OVERVIEW OF SHUTTLE TANKER OPERATIONS	2
Station Keeping	2
Cargo Handling	3
Submerged Turret Loading	3
Single Point Mooring	3
Bow Loading System	3
Communications	ŧ
Other Important Considerations	5
Manning and Training5	5
Shuttle Tanker	5
Standby Vessel	ò
Offshore Facility	ò
Oil Companies International Marine Forum (OCIMF) Publications	5
SECTION 2 - REGIONAL CONSIDERATIONS	,
Brazil	7
Main Operational Particulars	7
Maintenance Challenges	7
Brazilian Flag Considerations	7
North Sea	3
Norwegian Oil and Gas Recommended Guidelines for Offshore Loading Shuttle Tankers, Guideline No. 140	3
Cold Climates	3
US Gulf of Mexico	3
Alternate Compliance Program	3
SECTION 3 - DESIGN AND OPERATIONAL ISSUES)
Brazil9)
North Sea	1
SECTION 4 - TYPICAL CLASS NOTATIONS	5
General	5
Machinery and Control Systems	5
Ballast Water Treatment and Exchange15	5
Lifting Appliances	5

SECTION 5 - LOADING/UNLOADING SYSTEMS	17
BLU (Bow Loading/Unloading) and SLU (Stern Loading and Unloading) Notation	17
Single Point Mooring Arrangement	17
SECTION 6 - DYNAMIC POSITIONING AND PROPULSION REDUNDANCY	18
Dynamic Positioning Systems	18
Enhanced System Notations	20
SKP (Station Keeping Performance) Notation	20
APS (Athwartship Thruster) Notation	21
Propulsion Redundancy	21
SECTION 7 - HULL CONSTRUCTION AND EQUIPMENT	23
Structures	23
Anchoring	23
Helicopter Decks	23
Hull Condition Monitoring	23
SECTION 8 - OTHER MACHINERY AND SYSTEMS	25
Vapor Emission Control (VEC and VEC-L)	25
Enhanced Shaft Alignment	25
High Voltage Shore Connection System	25
Tailshaft Condition Monitoring	25
SECTION 9 - SAFETY AND HUMAN FACTORS	27
Safety	27
Enhanced Fire Protection	27
Human Factors	27
Habitability	27
Ergonomics	28
Navigation Bridge	28
Means of Access	28
SECTION 10 - ENVIRONMENT	30
Cold Climates	30
Ice Classes	30
Operation in Low Temperature Environments	30
Ice Loads Monitoring	31

TABLE OF CONTENTS, CONTINUED

Emissions and Pollution Control	32
Exhaust Emission Reduction	32
Energy Efficiency Design Index (EEDI) and the IMO GHG Strategy	
EU MRV (Monitoring, Reporting and Verification) of Fuel Consumption and IMO DCS (Data Collection System)	32
Environmental Protection	33
Hazardous Materials	33
Protection of Fuel and Lubricating Tanks	33
Noise Control	33
SECTION 11 - ADDITIONAL SURVEY AND INSPECTION CONSIDERATIONS	34
Hull Inspection	
Underwater Inspection in Lieu of Drydocking	
Condition Assessment Program (CAP)	
Process	
Benefits	
Preventative Maintenance Program	
Remote Surveys	36
SECTION 12 - NEW TECHNOLOGIES	37
Low Carbon Shipping Outlook	37
Gas and Other Low Flashpoint Fuels	37
Hybrid Power Systems	37
Energy Storage Systems	37
DC Power Distribution	38
CyberSafety	38
Software Systems	39
Smart Vessels	39
Digital Solutions	40
APPENDIX A - REFERENCES	

While ABS uses reasonable efforts to accurately describe and update the information in this Advisory, ABS makes no warranties or representations as to its accuracy, currency or completeness. ABS assumes no liability or responsibility for any errors or omissions in the content of this Advisory. To the extent permitted by applicable law, everything in this Advisory is provided "as is" without warranty of any kind, either expressed or implied, including, but not limited to, the implied warranties of merchantability, fitness for a particular purpose, or noninfringement. In no event will ABS be liable for any damages whatsoever, including special, indirect, consequential or incidental damages or damages for loss of profits, revenue or use, whether brought in contract or tort, arising out of or connected with this Advisory or the use or reliance upon any of the content or any information contained herein.

INTRODUCTION

ABS is the Class leader in the tanker industry with over a quarter of the worldwide existing fleet and orderbook. ABS has extensive global experience in all sizes of tankers. Its safety record and leading Port State Control (PSC) ranking are a testament to a focus on its mission.


ABS has a dedicated global workforce, with over 1200 Surveyors and 500 Engineers positioned in 200 offices in 70 counties around the world. ABS is looked upon as a trusted service provider not only for classification services, but also for leading technology and research geared toward improving vessel performance.

Shuttle tankers are primarily employed in offshore oil and gas fields. As the Class leader in the offshore industry with a significant majority of MODUs currently under ABS class, our extensive network of experienced Surveyors and Engineers are well positioned to support client operations. In a constantly evolving market, ABS works alongside its partners to tackle the most pressing technical, operational and regulatory challenges in order to help the industry operate safely, securely and responsibly.

This Advisory provides an overview of shuttle tanker design and operation. It discusses regional considerations for shuttle tankers operating in Brazil, the North Sea and the Gulf of Mexico. It explains how ABS optional notations complement class and statutory requirements to fulfill regional and operational requirements. We also identify requirements that are not covered by our class offerings that may be addressed by newbuild specifications or operational policies. We conclude by discussing new technologies that have already started to impact the shuttle tanker market.



SECTION 1 - OVERVIEW OF SHUTTLE TANKER OPERATIONS

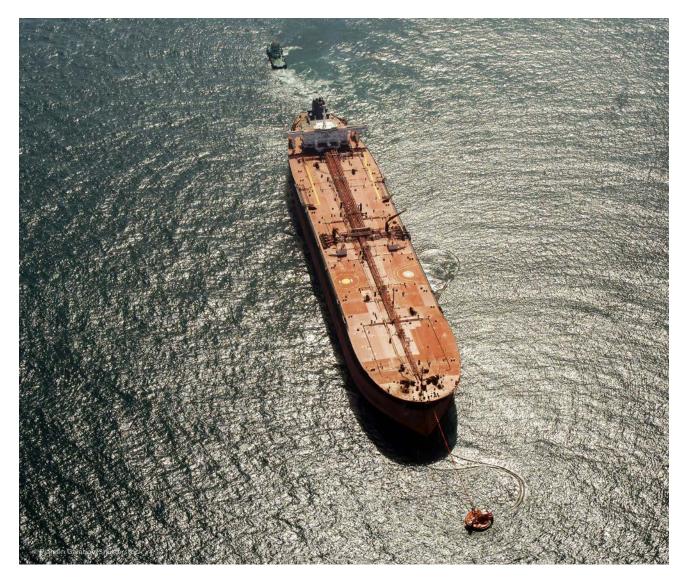

Shuttle Tankers are a specialized type of tanker designed to load cargo from an offshore facility. Shuttle tankers are often used as an alternative to pipelines where harsh environments, remote location or water depth prevents the installation of a pipeline.

The offshore facility that a shuttle tanker loads from is typically a Single Point Mooring (SPM) buoy or a Floating (Production) Storage and Offloading (F(P)SO) unit. Some F(P)SOs are turret moored, which allows them to weathervane around the turret depending on current, wave and wind direction. Some F(P)SOs are spread moored, which means that they have mooring lines off their bow and stern that maintain their heading despite current, wave and wind patterns. A shuttle tanker must be able to safely moor and load cargo from these types of units.

All of this means that station keeping, cargo handling and communication between the shuttle tanker and offshore loading facility are vitally important to the safe operation of a shuttle tanker.

STATION KEEPING

The Dynamic Positioning System is one of the most important systems on a shuttle tanker. The shuttle tanker must be able maintain position during approach, loading and departure, even in less than ideal weather conditions. To address station keeping requirements, ABS offers a full suite of Dynamic Positioning Notations.

Most shuttle tankers have a minimum of **DPS-2** dynamic positioning system. Additional complementary Notations including Enhanced System Notation, Station Keeping Notation and Athwartship Thruster Notations are also available and are discussed in Section 6.

To provide further propulsion safety, some shuttle tankers incorporate propulsion redundancy, with different combinations of multiple engines, engine rooms, and propellers. Propulsion redundancy is also discussed in Section 6.

CARGO HANDLING

SUBMERGED TURRET LOADING

Depending on the infrastructure provided in the offshore field, shuttle tankers may need to accommodate different loading systems. Some shuttle tankers accommodate a Submerged Turret Loading (STL) system that has a submerged buoy that connects through a cone-shaped turret in the keel of the shuttle tanker. This system is best suited for loading in areas with high sea states.

The buoy is spread moored to the seafloor and normally floats in a neutral position about 40 m below the surface. The mooring lines, risers and umbilicals are connected to a turret nested inside the buoy. The turret is free to rotate inside the buoy, which allows the shuttle tanker to weathervane while connected to the buoy.

The following is a high-level overview of the loading operation using the STL:

- 1. The shuttle tanker locates the buoy using hydroacoustic transponders and TV cameras.
- 2. A messenger line from the shuttle tanker is connected to a messenger line connected to the submerged buoy and the buoy is pulled up through the conical opening in the shuttle tanker bow.
- 3. The buoy is pulled into the hull and locked in place by hydraulic actuators.
- 4. The ship's loading manifold is lowered onto and connected to the buoy.
- 5. Loading of oil can begin.
- 6. Once loading has completed, the tanker releases the buoy, which sinks back down to the neutral position.

SINGLE POINT MOORING

A Single Point Mooring (SPM) Buoy consists of three components: the anchoring system, the buoy body and the product transfer system. The buoy is spread moored to the seabed. A Pipeline End and Manifold (PLEM) on the seabed connects to the SPM through a riser. The buoy loading mechanism rotates to allow buoy and tanker movement relative to the PLEM. The cargo is transferred from the PLEM to the tanker using the buoy's product transfer system.

The following is a high-level overview of the mooring and loading operation using the SPM:

- 1. A small boat receives a messenger line from the shuttle tanker and connects it to a messenger line from the buoy. The buoy messenger line is connected to a mooring line and a short length of mooring chain.
- 2. The tanker hauls in the mooring line and engages the mooring chain in chain stoppers on the shuttle tanker. The tanker is now moored to the buoy.
- 3. A floating hose from the buoy is hauled in and connected to the taker's loading manifold.
- 4. Loading of oil can now begin.

BOW LOADING SYSTEM

Introduced in the 1980s, the Bow Loading System (BLS) has become widely used. This system has a small house located on the bow of the shuttle tanker where the BLS equipment is located.

The following is a high-level overview of the loading operation using the BLS:

- 1. The shuttle tanker approaches the offloading facility, establishes contact and maintains the minimum required distance from the loading facility.
- 2. The BLS house doors are opened.
- 3. The shuttle tanker receives a messenger line from the offloading facility. This messenger line is connected to a short length of mooring chain, followed by a mooring rope.

- 4. The messenger line is hauled in by the traction winch and stored in the onboard rope locker.
- 5. The mooring chain that was connected to the messenger line is engaged by the shuttle tanker chain stopper. Now the shuttle tanker is moored to the offloading facility.
- 6. A second messenger line is attached to the mooring line that was just hauled in and secured. This messenger line is connected to the export hose on the offloading facility. This messenger line is disconnected from the mooring line and fed into the hose handling winch.
- 7. The messenger line and export hose are hauled in by the shuttle tanker.
- 8. The export hose is clamped into the BLS manifold.
- 9. Once all connections have been verified, the loading of cargo from the offloading facility to the shuttle tanker can begin.



COMMUNICATIONS

Communication between the shuttle tanker and the loading facility is vital for a safe and successful loading operation. Redundant voice, telemetry and Relative Position Reference Systems (RPRS) are typically required for all shuttle tankers. If personnel or sensors indicate that the minimum safe operating conditions are not being met, an emergency shutdown and disconnection is initiated.

OTHER IMPORTANT CONSIDERATIONS

Vapor Emission Control – The filling levels of cargo tanks in shuttle tankers are always in flux, with tanks empty a significant amount of time. This means that a large amount of Volatile Organic Compounds (VOCs) are generated and must be dealt with. ABS addresses these needs through our Vapor Emission Control Notations, **VEC** and **VEC-L**, discussed in Section 8.

Ballast Water Capacity – To enhance stability and station keeping performance, the ballast water capacity of a shuttle tanker may be increased.

Exhaust Emission Reduction – ABS has helped multiple owners develop a 2020 fuel strategy and shortlist and evaluate available scrubber solutions. To assist in meeting exhaust gas requirements, ABS offers notations for various types of exhaust emission abatement systems, including SOx scrubbers, Selective Catalytic Reduction (SCR) systems, and Exhaust Gas Recirculation (EGR) arrangements, as well as Exhaust Emissions Monitoring Systems (EEMS). These are discussed in Section 10.

Ballast Water Treatment – IMO has issued ballast water treatment guidance in the "International Convention for the Control and Management of Ships' Ballast water and sediments, 2004". Additionally, the USCG has issued separate requirements for type approval of Ballast Water Treatment systems, which do not coincide with the IMO requirements. ABS can help owners and operators sort through these requirements and make sure that a BWT system is installed onboard that meet all local requirements. See Section 4 for more information on Ballast Water Treatment.

Enhanced Fire Protection – In addition to the normal tanker fire protection requirements, a shuttle tanker must provide additional fire protection in way of the bow loading system. Activation of these systems must be integrated into the emergency shutdown system. The ABS *Bow or Stern Loading and Unloading (BLU or SLU) Guide,* discussed in Section 5, provides additional optional fire-fighting requirements for the bow loading system.

Human Factors – Providing a safe work environment is a key to maintaining crew safety and morale. ABS offers Habitability, Ergonomic, Navigation Bridge Layout and Means of Access Notations to keep your crew safe and efficient. Section 9 discusses safety and human factors Notations offered by ABS.

MANNING AND TRAINING

SHUTTLE TANKER

Shuttle Tanker Master

The Master should be familiar with all aspects of shuttle tanker operations for their vessel. When coming on board a new vessel, the Master typically completes a minimum number of loading cycles, ordinarily between two and six, supervised by a qualified Master, before he is qualified to conduct unsupervised loading operations.

The Master also typically holds a valid Dynamic Positioning (DP) certificate applicable for the vessel type.

The Master is responsible for communications with the offshore facility and standby vessel. Normally, communications are established at 10 nm from the offshore facility and reports are given each hour during loading. Communications also occur when the shuttle tanker is ready to disconnect and when the shuttle tanker is clear of the loading facility.

Junior Officers

In addition to the Master, a minimum two Deck or Junior officers normally hold appropriate DP certificates.

Engine Room Manning

During approach, loading and departure, the engine room typically needs to be fully manned to meet flag State requirements. This generally includes one engineer and one rating.

Bridge Manning

DP Operator – The Master is not normally part of the DP watch team but is available to assist. The Senior DP certified officer on the watch, assisted by the Junior officers on watch, is normally responsible for DP operations.

VOC Operations

The crew members in charge of the VOC plant should be fully trained in the operation of the VOC equipment.

BLS Deck Officer

The Deck Officer in charge of BLS operations should have undergone training provided by the equipment manufacturer. Any Deck Officer being trained in BLS operations should undergo a minimum number of loading cycles, normally three, supervised by a qualified officer, before being placed in charge of BLS operations.

Crane Operator

The crew members who perform crane lifts should be fully trained in operation of the onboard crane(s).

Onboard Training

Many shuttle tankers are equipped with onboard training software. This software can simulate current trading patterns and a variety of field conditions. Most shuttle tanker operators require a minimum number of simulator hours for DP and BLS trained officers and crew.

STANDBY VESSEL

The Standby Vessel Master typically:

- Makes sure that all crew members are familiar with the arrival, loading and departure operations for the shuttle tanker and the offshore facility.
- Makes sure all crew members are trained in emergency procedures, including emergency towing procedures for the shuttle tanker.
- · Monitors all communications between the shuttle tanker and offshore facility.
- Is prepared to provide emergency assistance in the event of:
 - Hawser/loading hose failure
 - Loss of power, propulsion or maneuvering capability on the shuttle tanker
 - Collision
 - Fire/Explosion
 - Cargo Spill
 - Man Overboard

OFFSHORE FACILITY

The Offshore Facility Manager typically:

- Makes sure the crew involved with offloading operations are familiar with all offloading procedures during approach, offloading and departure of the shuttle tanker.
- Makes sure all mooring and offloading equipment is in good working condition.
- Establishes communications with the shuttle tanker before it is 10 nm from the offshore facility.
- Notifies the shuttle tanker Master of any other vessels operating within the exclusion zone for the offshore facility.
- Reports each hour during the loading operation on the loading rate.
- Initiates oil transfer shutdown in emergency situations.

OIL COMPANIES INTERNATIONAL MARINE FORUM (OCIMF) PUBLICATIONS

The Oil Companies International Marine Forum (OCIMF) has produced several excellent publications that address ship management and safety on shuttle tankers. Of particular interest is the OCIMF *Guidelines for Offshore Tanker Operations*.

SECTION 2 - REGIONAL CONSIDERATIONS

BRAZIL

Main Operational Particulars

- 1. As the majority of F(P)SOs operating offshore Brazil are spread moored (versus turret moored), DP capabilities are vital for the shuttle tankers.
- 2. For the same reason, the operations sector is wider (see below diagram) than the one used for weathervaned operating conditions. This requires special attention on the DP control settings as well as customized training for the crew.
- 3. The above requires a very detailed operations procedure to cover the sequences for connection and disconnection.
- 4. The use of floating hoses for offloading may induce significant vibration in the Bow Loading System (BLS). Additional inspection and maintenance and affected parts may be required.

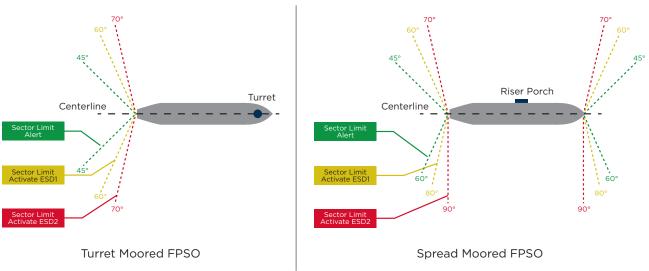


Figure 1. Sectors Definitions for Moored F(P)SOs

Maintenance Challenges

- 1. Difficulties to service thrusters while afloat.
- 2. Electrical problems, with the sensors, are not uncommon on BLS components.
- 3. Vigilance is required to keep the movable parts of BLS lubricated.
- 4. Critical components such as BLS, thrusters and high voltage switchboards require special attention during overhaul periods.

Brazilian Flag Considerations

Shuttle tankers operating in Brazilian waters may require a percentage of the crew to be Brazilian nationals depending on the ship's service and time spent operating in Brazilian waters. It is recommended that local Brazilian officials be contacted before beginning shuttle tanker operations in Brazilian waters.

NORTH SEA

Norwegian Oil and Gas Recommended Guidelines for Offshore Loading Shuttle Tankers, Guideline No. 140 Most shuttle tankers operating in the North Sea region are required by charterers to comply with the Norwegian Oil and Gas recommended Guidelines for Offshore Loading Shuttle Tankers, Guideline No. 140.

This guideline is sponsored by Norwegian Oil and Gas Association's FPSO and Shuttle Tanker Network and recommended by Norwegian Oil and Gas Operations Committee.

This guideline contains information on:

- Hull Design and Structural Requirements
- Oil Spill Preventative Measures
- Machinery and Propulsion
- · Cargo Vent and Ballast Systems
- · Bow Loading Systems and Monitoring
- Dynamic Positioning
- Firefighting for Offshore Loading
- Safety Equipment
- · Testing and Qualifications Requirements
- Competence and Manning

Cold Climates

With many shuttle tankers operating in the North Sea, the Canadian east coast (offshore Newfoundland) and the Russian (Varandey, Caspian, Sakhalin and Yamal) coast, there are specific considerations related to operating in cold climates that need to be considered. ABS offers Notations for Operation in Low Temperature Environments and for Ice Load Monitoring. We also offer a full suite of Ice Class Notations including Polar Class, Enhanced Polar Class, First-year Ice Class and Baltic Ice Class. See "Cold Climates" in Section 10 for more information.

US GULF OF MEXICO

Alternate Compliance Program

The Jones Act requires that vessels operating coastwise between U.S. ports or production facilities in the U.S. Gulf of Mexico and a U.S. port must be U.S. built and flagged. Traditionally, being U.S. flagged meant complying with all U.S. requirements contained in the Code of Federal Regulations (CFR). However, the U.S. Coast Guard has now implemented Navigation and Vessel Inspection (NVIC) No. 2-95, the U.S. Coast Guard's Alternate Compliance Program (ACP). The ACP does not supersede the Jones Act requirement that vessels trading coastwise between U.S. ports be U.S. built.

The ACP allows new or existing vessels to obtain U.S. flag by meeting applicable Statutory requirements, Class Rules and additional requirements contained in a Supplement to the Class Rules. The Coast Guard considers the Statutory requirements plus Class Rules plus the Supplement requirements to provide an equivalent level of safety as that provided by meeting the full CFR requirements. ABS has USCG approved Supplements available on the Rules and Guides download page of our web site, www.eagle.org.

Under the ACP, the USCG can also delegate authority to ABS to conduct plan reviews and surveys on behalf of the USCG. So, rather than dealing directly with the USCG, designers, shipyards, owners and operators can use ABS as a U.S. flag Recognized Organization (RO) for vessels that have been accepted into the ACP program.

SECTION 3 - DESIGN AND OPERATIONAL ISSUES

BRAZIL

WIND, WAVES AND CURRENT (CAMPOS BASIN)

The Campos Basin is one of 12 coastal sedimentary basins of Brazil. It spans both onshore and offshore parts of the South Atlantic with the onshore part located near Rio de Janeiro. The Campos Basin is bounded on the south by the Cabo Frio High, separating the basin from the Santos Basin and on the north by the Vitória High, forming the boundary with the Espírito Santo Basin. Campos Basin contains the Paraiba do Sul River delta.

The environmental conditions in the Campos Basin are generally fair, with severe weather conditions limited from July to October each year.



- 1. Wind Northeast winds prevail in Campos Basin with an average wind speed of 16.5 knots (8.5 m/s) but going as high as 40 knots (20.6 m/s). In autumn (March to May) and spring (September to November), sudden changes in wind direction (from NE to SW in less than one hour) and intensity (gusts up to 55 knots or 28.3 m/s) can occur. Shuttle tankers should be able to stay on station during these events.
- 2. Waves Northeast waves prevail with significant wave heights (Hs) varying from 0.5 to 1.0 m. A one-year return period wave can have a height of up to 5.7 m, with a period of 13.7 seconds and a 100-year return period can have a wave height of up to 7.8 m with a period of 15.3 seconds.

When heavy winds and waves come from a specific direction and the swell is reflected 90°, large roll motions in the shuttle tanker and F(P)SO may be induced.

3. Current - The "Brazil Stream" moves south along the Brazilian coast and exerts an influence in the Campos Basin area. Currents moving south with speed of 0.8 m/s (1.5 knots) going up to 1.5 m/s (approx. 3.0 knots) have been recorded.

DYNAMIC POSITIONING SYSTEM

As can be seen in the above discussion of environmental conditions offshore Brazil, wind, waves and currents are not always aligned and can rapidly shift. A minimum of **DPS-2** is typically required for shuttle tankers operating off Brazil.

BOW LOADING SYSTEM (BLS)

All shuttle tankers in offshore Brazil service should be equipped with a Bow Loading System (BLS) for cargo loading. As discussed in Section 1, the Bow Loading System (BLS) should provide a system for connecting a shuttle tanker to an offshore loading terminal with the purpose of offloading crude oil from the terminal. The loading hose from the loading terminal should be connected to the BLS loading manifold on the ship by means of a hydraulic coupler.

HIGH PERFORMANCE RUDDER

Station keeping is key to successful operations offshore Brazil and the rudder is part of that station keeping system. A high lift type, field proven rudder integrated into the DP software is typically required for shuttle tankers operating in Brazilian waters.

EQUIPMENT

The following equipment should be on board all shuttle tankers operating in Brazilian waters:

- **Traction Winch** Must meet minimum pull-in speed for the offloading hose line and pull-in speed of the mooring system.
- Chain Stopper A chain stopper for the mooring chafing chain with a hydraulic quick-release device adequate for the shuttle tanker size should be installed.
- **Emergency Towing Arrangements** The shuttle tanker should be fitted with an emergency towing arrangement on the stern ready to be used, even in a blackout situation.
- **Pneumatic Line Throwers and Accessories** The shuttle tanker should have a pneumatic line thrower and suitable tools for the Emergency Towing Arrangement on the poop deck, as well as a pneumatic line thrower and adequate tools for the transferring of the messengers on the forecastle deck.
- **Messenger Lines** The shuttle tanker should be fitted with two (2) polypropylene messenger lines of 10-inch circumference and 720 ft. length each and one (1) polypropylene messenger line of 6-inch circumference and 720 ft. length. These lines are used for both mooring hawser and offloading hose line handling.
- **Personnel Transfer** The shuttle tanker should be fitted with a proper crane to transfer personnel in a safe manner through a personnel basket transfer.
- **Telemetry System** The shuttle tanker should be fitted with a radio signal-based telemetry system that verifies interlock and permits pumping of oil during a transfer. Voice communication with the F(P)SO should also be included.
- **Relative Position Reference System (RPRS)** There should be a minimum of three (3) RPRS installed. For "Full DP" operational mode, at least two (2) RPRS should be operational and in use during approach, mooring, connection, loading, disconnection and departure operations at F(P)SOs.
- Hawser Tension Monitoring System The shuttle tanker should be provided with a hawser tension monitoring system.

USE OF TUG ASSIST

Normal Operations with a Dynamically Positioned Shuttle Tanker (DPST) do not require tug assist. If a Degraded Status exists, then tug assist may be required.

Degraded Status: The operational condition of a DP shuttle tanker in which a possibility of losing its safe operating capability has been detected. Normally, there will not be an imminent risk of positioning loss. Typically, failure, malfunction or high load demand on essential DP equipment or systems (power generation, thrusters, computers, reference systems, sensors, etc.) causes a degradation of the vessel capability to operate within their rated DP capability. Generally, the degraded operational condition is related to redundancy loss.

It is important to note that "degraded status" does not necessarily mean that vessel operations must be stopped. However, all personnel in charge of the offloading operations must be informed in order to analyze the situation and take the appropriate course of action.

Brazil does not allow two (2) tugboats to operate simultaneously supporting shuttle tankers at any stage.

MINIMUM DISTANCE BETWEEN THE F(P)SO AND THE SHUTTLE TANKER

During approach, the minimum distance between the F(P)SO and the shuttle tanker is not to be less than 50 m. During operations, the minimum distance between the F(P)SO and the shuttle tanker is not to be less than 90 m.

TENSION ON THE MOORING HAWSER

During operations, the tension on the mooring hawser should not exceed 100 tons. In the event the tension exceeds 100 tons, the loading operation should be terminated, and disconnection should take place.

PRESSURE TEST

Connection Tightness Test - The tightness of the NSV (North Sea Valve) connection with the BLS (Bow Loading System) coupler should be tested before each loading. The test must take place with open Coupler Valve and closed Crude Valve or Inboarding Valve, so that the test is limited to the bow piping (BLS area). The test should be carried out by the F(P)SO with a pressure of five bar for ten minutes. The shuttle tanker will monitor the pressure until the test has ended. The results of the test will be logged. After the conclusion, the system must be depressurized by the F(P)SO.


Hose Integrity Test - The pressure test for the verification of the hose integrity should be part of the inspection plan, following the international standard as established by OCIMF (Guidelines for the handling, storage, inspection and testing of hoses in the Field) in its last version.

Note: The Connection Tightness Test described above has the objective of testing the tightness between the NSV and the BLS. IT IS NOT a hose Integrity test nor an operational test. The pump pressure during the offloading operation IS NOT limited to 5 (five) BAR. The maximum pump pressure during the offloading operation is limited by the pressure used during the last hose integrity test.

NORTH SEA

The vessels operating in the North Sea, North Atlantic and Norwegian Sea fields have traditionally been designed for considerably higher environmental loads and higher throughput compared to vessels operating in more benign waters. F(P)SOs operating in these areas typically have an internal turret in the bow or well forward of midships, with transfer of pressurized production and injection streams going through piping systems in the turret. A Bow Loading System (BLS) is typically used on the shuttle tanker for loading from the F(P)SO or other offshore facility.

To verify the robustness of the vessel for North Sea duty, ABS optional analyses such as Dynamic Loading Analysis (SH-DLA), Spectral Fatigue Analysis (SFA(years)), and Fatigue Life (FL(Years)) should be considered. See Section 7 for more information.

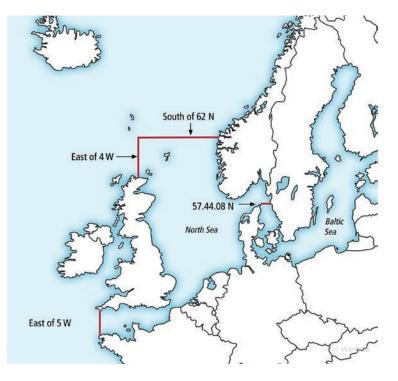

HULL DESIGN AND STRUCTURAL REQUIREMENTS

- 1. Longitudinal Bulkheads Shuttle tankers should be equipped with a minimum of one solid longitudinal bulkhead throughout the cargo area.
- 2. Structural Strength Cargo and ballast tanks should be designed for any degree of filling in order to avoid structural damage due to sloshing. Any shuttle tanker designed to the IACS Common Structural Rules (CSR) will meet this requirement.
- **3.** Internal Corrosion Protection of Cargo Tanks Cargo tanks should have corrosion protection using coatings that comply with the most current IMO requirements for cargo and ballast tanks. Anodes should be installed for protection of suction wells.
- 4. Helideck Arrangements All shuttle tankers should be equipped with a certified helideck.
- **5.** Securing of Anchors Stopper-bar or guillotine type anchor chain stoppers or equivalent means should be fitted to provide proper stowing of anchors.

PREVENTION OF OIL SPILLS

Coaming Arrangement - Oil spill coamings should be provided in the following areas:

- 1. The main deck between the bow and the midship manifold.
- 2. From the midship manifold to the aft end of the main cargo tank deck.
- 3. From the aft end of the main cargo tank deck to the accommodation.
- 4. In the BLS area, the manifold room should have gutter bars for drainage to main cargo deck. A forward coaming should also be provided.

Oil Spill Pumping System – For drainage of oil spills on deck, shuttle tankers should be equipped with permanently installed pumping or piping systems. The pump should be protected from freezing either by design or by operational procedures.

MACHINERY AND PROPULSION

The following general requirements are regarded as a minimum for a shuttle tanker in North Sea service:

- 1. The main and auxiliary engine(s) should have independent fuel systems (tanks, pumps and piping systems).
- 2. Pumps, filters, strainers, etc., for the main and auxiliary engines should be arranged in parallel.
- 3. Arrangement of instrumentation and alarms in above-mentioned systems should be documented.
- 4. All service tanks should be above the engines and boilers to provide gravity supply, or an equivalent system should be provided so that fuel supply is maintained.

In addition:

- 1. Automatic de-sludging of filters should be provided.
- 2. A mixing tank should be provided so that mixing of different fuels can be done before use in the engines.
- 3. Large electrical motors should be RPM controlled.

RUDDER AND THRUSTER TUNNEL GRATINGS

The shuttle tanker should be equipped with high efficiency rudder(s).

All tunnel thrusters should have protective gratings.

CARGO, VENT AND BALLAST SYSTEMS

Cargo Loading Capacity – To reduce risk, the time to load cargo should be minimized. The shuttle tanker's capacity to receive cargo should be optimized according to the shuttle tanker's total cargo tank volume.

Cargo Valves - Cargo valves should avoid pressure surges by having an appropriate closing time.

Cargo and Ballast Pump Monitoring - For shuttle tankers with a pump room, the operating temperature of the pumps should be monitored. Vibration monitoring of all cargo, stripping and ballast pump bearings should be provided as well.

Cargo/ballast Monitoring - All cargo tanks should be provided with a radar type ullage gauging system. All ballast tanks and bunker tanks should be provided with automatic gauging systems. All gauging systems should provide input to a class-approved loading computer.

De-ballasting Capacity – A shuttle tanker should have at least two ballast pumps. The pumps should be able to de-ballast 100% ballast volume within 70% of the total loading time.

Explosive Atmosphere Monitoring - Ballast tanks and void spaces adjacent to cargo or slop tanks should be equipped with a fixed gas detection system.

Cargo/Slop Tank Venting System - Each individual cargo and slop tank should be provided with at least one high-velocity P/V-valve.

Vapor Emission Controls – Shuttle tankers should be equipped to meet the applicable Volatile Organic Compounds (VOC) emission requirements as stipulated by the VOC Industry Co-operation and enforced by the Norwegian Environment Agency.

BOW LOADING SYSTEM (BLS)

All shuttle tankers should be equipped with a Bow Loading System (BLS) for cargo loading.

A Failure Mode, Effect Analysis (FMEA) for the BLS and cargo loading system should be carried out for each shuttle tanker prior to the first offshore loading.

The BLS and cargo loading system should as a minimum be designed and verified according to these requirements:

- 1. A single failure in the cargo loading and storage system should not lead to a pressure rise exceeding the design pressure of the cargo loading and storage system.
- 2. No single failure should cause a single-configured valve to close or open uncontrolled.
- 3. The vessel should under all circumstances be able to execute a controlled Emergency Shutdown operation.
- 4. Each active component should be designed with a fail-safe specification.

BLS Design Requirements

Remote control and monitoring of the following BLS equipment should be provided on the bridge:

- 1. Traction winch
- 2. Chain stopper
- 3. Coupler valve
- 4. Inboard valve
- 5. Inboard by-pass valve
- 6. Hydraulic pump station

A control station on the forecastle deck should control the following:

- 1. Connection/disconnection of the loading hose
- 2. Bow door
- 3. Loading manifold
- 4. Hose handling winch
- 5. Forward/aft movement of the chain stopper, or adjustable roller fairlead

The following should be locally operated from the bow area:

- 1. Messenger line winch and stowing arrangement
- 2. Deck crane

GREEN LINE CONTROL SYSTEM

The BLS and cargo loading system should be provided with a "green line" control system. When all the "green line" requirements are satisfied, the telemetry system should transmit a "loading permitted" signal to the offloading facility. Any interruption in the "green line" should automatically initiate an Emergency Shutdown on the shuttle tanker and the offloading facility.

TELEMETRY SYSTEM

A telemetry system should be a fail-to-safe design and capable of safely starting, controlling and stopping the cargo transfer. Duplicate telemetry systems operating in parallel and duplicate UHF radios with automatic changeover should be used.

DYNAMIC POSITIONING

The shuttle tanker should be capable of maintaining safe position and heading during connection, loading and disconnection by using a Dynamic Positioning System (DPS).

DP capability plots should be developed for the worst single failure according to the environmental conditions.

The intent of the capability plots is to identify each shuttle's DP capability. The plots will generally indicate a window of safe operation during connection and during loading.

POSITION REFERENCE SYSTEM

The DP system should be equipped with redundant Position Reference Systems (PRSs). To reduce the risk of interference and shadow zones, the location of the PRS sensors should be optimized.

FIREFIGHTING FOR OFFSHORE LOADING

A fire water system should be installed in the BLS area. The system should serve two purposes:

- 1. Supply of deluge (water only) to the BLS equipment and bow slot to prevent any sparks that might cause a fire during emergency disconnection.
- 2. Supply of water for the foam fire-fighting system. The foam system should be operated from the fire-fighting panel on the bridge.

SAFETY EQUIPMENT

The following equipment should be provided:

- 1. Emergency towing arrangements
- 2. Pneumatic line throwing device (air gun)
- 3. Messenger line cutter
- 4. Safe walkways
- 5. Free fall Lifeboat
- 6. Fast Rescue Craft
- 7. Personal Protective Equipment

SECTION 4 - TYPICAL CLASS NOTATIONS

GENERAL

Shuttle tankers that comply with the requirements of the ABS Rules and which were surveyed by ABS during construction may be classed **承** A1, Oil Carrier, ESP, (E), AMS, ACCU, DPS-2, APS, CSR, AB-CM.

The symbol 🖲 is assigned if the vessel's anchor and chain comply with the Rules.

Shuttle tankers must also be enrolled in ABS's Enhanced Survey Program. Qualifying vessels are given the notation **ESP**.

Optional Notations typically awarded to Shuttle Tankers include ENVIRO, BLU, SPMA, BWT, UWILD, TCM, VEC-L, NBLES, POT, CRC, PMA, RW and HELIDK.

All these Notations are discussed in more detail later in this Advisory.

MACHINERY AND CONTROL SYSTEMS

The machinery, boilers, and systems of a shuttle tanker may be given the notation **#** AMS.

ABS also offers notations for centralized control systems. The **ACC** notation signifies that a vessel has the means to control and monitor the propulsion-machinery space from a continuously manned centralized control and monitoring station instead of locally manning the propulsion machinery space. The **ACCU** notation means that the vessel is fitted with various degrees of automation and with remote monitoring and control systems to enable the propulsion machinery space to be periodically unattended.

BALLAST WATER TREATMENT AND EXCHANGE

At the time of publishing, ABS had 10 engineering offices with Ballast Water experience. 47 systems have been design assessed by ABS. 139 Vendor systems are tracked by ABS and over 480 vessels are operating with the ABS **BWT** Notation.

BALLAST WATER EXCHANGE (BWE)

This notation is assigned to vessels designed, constructed, and surveyed in accordance with the ABS Guide for Ballast Water Exchange.

BALLAST WATER TREATMENT (BWT)

BWT – This notation is assigned to a vessel with a ballast water management system installed on board that has received a Type Approval Certificate issued by an IMO Member State. The system has been reviewed and installed in compliance with the ABS *Guide for Ballast Water Treatment* and serves to identify a level of compliance with the applicable regulations contained in the IMO "International Convention for the Control and Management of Ships' Ballast Water and Sediments, 2004", as well as those supporting IMO Guidelines referenced in the Convention addressing the ballast water management systems.

BWT+ – This notation is assigned to a vessel with a ballast water management system installed on board that, in addition to being type approved by an IMO Member State and evaluated for compliance with the requirements in the ABS *Guide for Ballast Water Treatment*, has been fabricated under survey at the manufacturing facility by an ABS Surveyor.


LIFTING APPLIANCES

A deck crane is standard equipment for a shuttle tanker equipped with a Bow Loading System (BLS). ABS offers a range of notations for lifting appliances, including shipboard cranes, special purpose cranes, personnel lifting cranes and shipboard elevators.

As discussed further in the ABS *Guide for Certification of Lifting Appliances*, vessels may be classed with the notation **CRC** if they have been issued an ABS Register of Lifting Appliances. ABS offers notations for several types of cranes, including:

- SC for shipboard cranes
- SP for special purpose cranes (such as monorail hoists, engine room cranes, or provision cranes)

If these cranes may be used for personnel lifting, the **PL**, **PL+**, or **PL++** notations may also be given. These notations distinguish the level of emergency recovery capability of the crane.

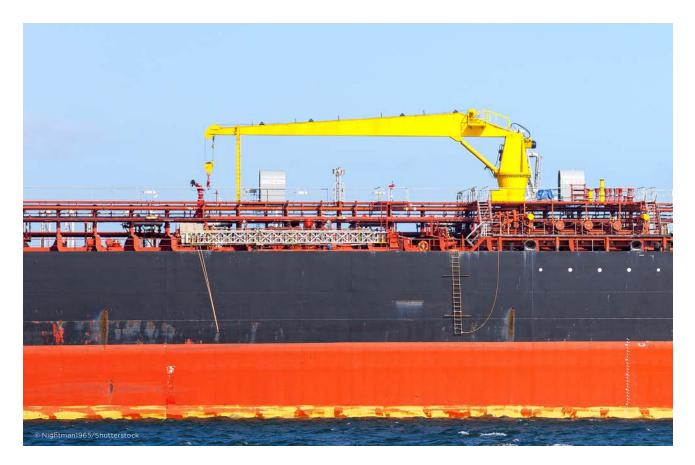

SECTION 5 - LOADING/UNLOADING SYSTEMS

ABS offers Notations for the following Loading/Unloading Systems:

BLU (BOW LOADING/UNLOADING) AND SLU (STERN LOADING AND UNLOADING) NOTATION

These Notations address arrangements where a shuttle tanker is provided with facilities to load or unload cargo with a piping manifold located at the bow or stern of the vessel. Requirements for this Notation can be found in the ABS *Guide for the Class Notation Bow or Stern Loading and Unloading (BLU or SLU) for Oil Carriers, Liquefied Gas Carriers or Chemical Carriers.* This Guide gives minimum ABS requirements for:

- 1. Cargo Piping Systems
- 2. Hazardous Area and Electrical Systems
- 3. Communication Systems
- 4. Fire Extinguishing Arrangements

See Figure 2 below for a profile view of a typical Bow Loading System (BLS).

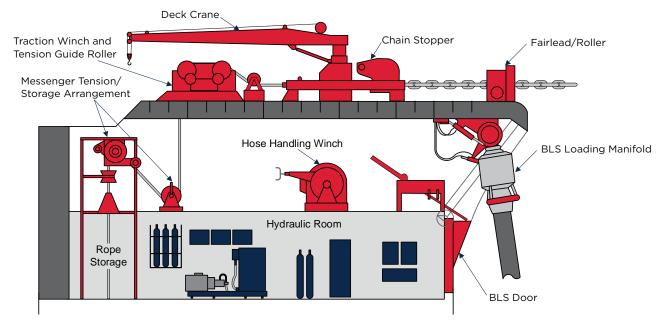


Figure 2. Typical Bow Loading System

SINGLE POINT MOORING ARRANGEMENT

SPMA – This notation is assigned to a shuttle tanker provided with mooring arrangements in accordance with the requirements of Section 3-5-2 of the ABS *Rules for Building and Classing Marine Vessels (Mooring of Oil Carriers at Single Point Moorings).* This Rule Section gives ABS requirements for:

- 1. Submission of Plans
- 2. Arrangements
- 3. Bow Chain Stoppers
- 4. Bow Fairleads
- 5. Pedestal Rollers
- 6. Winches or Capstan
- 7. Winch Storage Drum
- 8. Materials

SECTION 6 - DYNAMIC POSITIONING AND PROPULSION REDUNDANCY

DYNAMIC POSITIONING SYSTEMS

The Dynamic Positioning System is one of the most important systems on a shuttle tanker. The shuttle tanker must be able maintain position during approach, loading and departure, even in less than ideal weather conditions. Even though the full suite of ABS DPS notations is presented below, the minimum that should be considered for a shuttle tanker is **DPS-2**. Additional complementary Notations including Enhanced System Notation, Station Keeping Notation, Athwartship Thruster Notation and Propulsion Redundancy are also available and discussed below.

Dynamic positioning systems installed on shuttle tankers and built and tested in compliance with the requirements in the ABS *Guide for Dynamic Positioning Systems (DPS Guide)* and relevant Rules may be assigned different classification notations depending on the degree of redundancy built into the system as defined below. These notations are not a requirement for classification of the vessel and are to be assigned only on the specific request of the Owner.

- **DPS-0**: For vessels, which are fitted with centralized manual position control and automatic heading control system to maintain the position and heading under the specified maximum environmental conditions.
- **DPS-1**: For vessels, which are fitted with a dynamic positioning system which is capable of automatically maintaining the position and heading of the vessel under specified maximum environmental conditions having a manual position control system.
- **DPS-2**: For vessels, which are fitted with a dynamic positioning system which is capable of automatically maintaining the position and heading of the vessel within a specified operating envelope under specified maximum environmental conditions during and following any single fault, excluding a loss of compartment or compartments.
- **DPS-3**: For vessels, which are fitted with a dynamic positioning system which is capable of automatically maintaining the position and heading of the vessel within a specified operating envelope under specified maximum environmental conditions during and following any single fault, including complete loss of a compartment due to fire or flood.

DPS-1, **DPS-2** and **DPS-3** classification notations are structured in line with the IMO MSC/Cir.645 "Guidelines for Vessels with Dynamic Positioning Systems". **DPS-1**, **DPS-2** and **DPS-3** are in line with IMO equipment classes of 1, 2 and 3, respectively.

At the Owner's request, an enhanced system notation (**EHS**), as a supplement for **DPS**-series notations, may be assigned. The notation provides the basis for the measurement of the enhancement of critical components of the DP system, including power system, thruster system and control system. The main objective of the enhanced system notation is to improve reliability, operability and maintainability. Additional information on the **EHS** Notations is provided below, and Section 8 of the *DPS Guide* provides details for the enhanced system notations.

Also, at the Owner's request, a station keeping performance notation (**SKP**), as a supplement to the **DPS**-series notations may also be assigned to the vessel. The objective of the station keeping performance notation is to recognize the DP capability and to encourage robust design of DP systems. See below for additional information. Section 9 of the *DPS Guide* provides details for station keeping performance requirements.

To meet the requirements for a **DPS**-series notation, the minimum number of subsystems and components and the redundancy requirements for power system, thruster system and DP control system are provided in the following summary:

Subsystem or			Minimum I	Requirements for E	Each Classification	Notation
Component	Equipme	nt	DPS-0	DPS-1	DPS-2	DPS-3
	Generators and Prime Movers		Non-redundant	Non-redundant	Non-redundant	Redundant, in separate compartments
	Main Switchboard		1	1	1 with bus-tie	2 with bus-ties, in separate compartments
Power System	Bus-tie Breaker		0	0	1	2
	Distribution System		Non-redundant	Non-redundant	Non-redundant	Redundant, in separate compartments
	Power Management		No	No	Yes	Yes
Thrusters	Arrangement of Thrusters		Non-redundant	Non-redundant	Non-redundant	Redundant, in separate compartments
	DP Control: Number of Control Computers		0	1	2	2 + 1 in backup control station
	Manual Position Control: Joystick with Auto Heading		Yes	Yes	Yes	Yes
	Manual Thruster Control		Yes	Yes	Yes	Yes
Control System	Position Reference Systems		1	2	3	2 + 1 in backup control station
		Wind	1	2	3	2 + 1 in backup control station
	Sensors	Motion Reference Unit (MRU)	0	1	3	2 + 1 in backup control station
	Uninterruptible Power Supply (UPS) System		0	1	2	2 + 1 in separate compartment
Backup Control Station for Backup Unit			N/A	N/A	N/A	Yes
Consequence Analyzer			No	No	Yes	Yes
FMEA			No	No	Yes	Yes
IMO Class Equivalent			No	1	2	3

ENHANCED SYSTEM NOTATIONS

Enhanced system notations (**EHS**-series) are complementary to the corresponding **DPS**-series notations. The requirements for the **DPS**-series notations given in the above Table are to be complied with. Additionally, the following are to be complied with for the Enhanced System notations (**EHS**-series).

EHS-P	EHS-C	EHS-F
Autonomous Generator Set	2 +1 backup DP control computers and controllers	Generators and Prime Movers
Bus-tie Breaker Redundantly configured between each bus segment	Wind Sensors 3 + 1 in back up control station	Separate compartments, A60 for high fire risk area. Watertight below damage waterline
Enhanced Generator Protection	Gyros 3 + 1 in backup control station	Power Distribution System A0 between redundant groups. Watertight below damage waterline
Enhanced Power Management	Motion Reference Unit (MRU) 3 + 1 in backup control station	Thruster System A0 between redundant groups. Watertight below damage waterline
Autonomous Thruster Set	Position reference systems 3 + 1 in backup control station	Controller Space A0 between redundant groups



SKP (STATION KEEPING PERFORMANCE) NOTATION

SKP is an optional notation addressing the station keeping performance for specified limiting environmental conditions, such as wind speed and direction, wave height and frequency, current speed and direction. In general, the limiting environments are to be applied to intact (all thrusters running) and damaged (worst case failure) conditions unless the limiting environmental conditions for post failure cases are also specified. The directions for wind, waves and current can be different and are to be specified by the Owner.

APS (ATHWARTSHIP THRUSTER) NOTATION

Shuttle tankers, where fitted with thrusters capable of producing thrusts primarily in the athwartship direction and intended to assist in maneuvering the vessel, at the discretion of the owners, may comply with 4-1-1/1.5 and 4-3-5/1.3.1 of the ABS *Rules for Building and Classing Marine Vessels* and upon verification of compliance, may be assigned the class notation **APS**.


PROPULSION REDUNDANCY

Where requested by the Owner, propulsion and steering installations which are found to comply with the requirements specified in the ABS *Rules for Building and Classing Marine Vessels* and which have been constructed and installed under survey by the ABS Surveyor may be assigned with the following class notations, as appropriate.

- **R1** A vessel fitted with multiple propulsion machines but only a single propulsor and steering system will be assigned the class notation **R1**.
- **R2** A vessel fitted with multiple propulsion machines and also multiple propulsors and steering systems (hence, multiple propulsion systems) will be assigned the class notation **R2**.
- **R1-S** A vessel fitted with only a single propulsor but having the propulsion machines arranged in separate spaces such that a fire or flood in one space would not affect the propulsion machine(s) in the other space(s) will be assigned the class notation *R1-S*.
- **R2-S** A vessel fitted with multiple propulsors (hence, multiple propulsion systems) which has the propulsion machines and propulsors, and associated steering systems arranged in separate spaces (propulsion machinery space and steering gear flat) such that a fire or flood in one space would not affect the propulsion machine(s) and propulsor(s), and associated steering systems in the other space(s) will be assigned the class notation **R2-S**.

+ (Plus Symbol) The mark + will be affixed to the end of any of the above class notations (e.g., **R1+**, **R2-S+**) to denote that the vessel's propulsion capability is such that, upon a single failure, propulsive power can be maintained or immediately restored to the extent necessary to withstand adverse weather conditions without drifting, in accordance with the ABS *Rules for Building and Classing Marine Vessels*.

Figure 1. Arrangement of Propulsion Redundancy

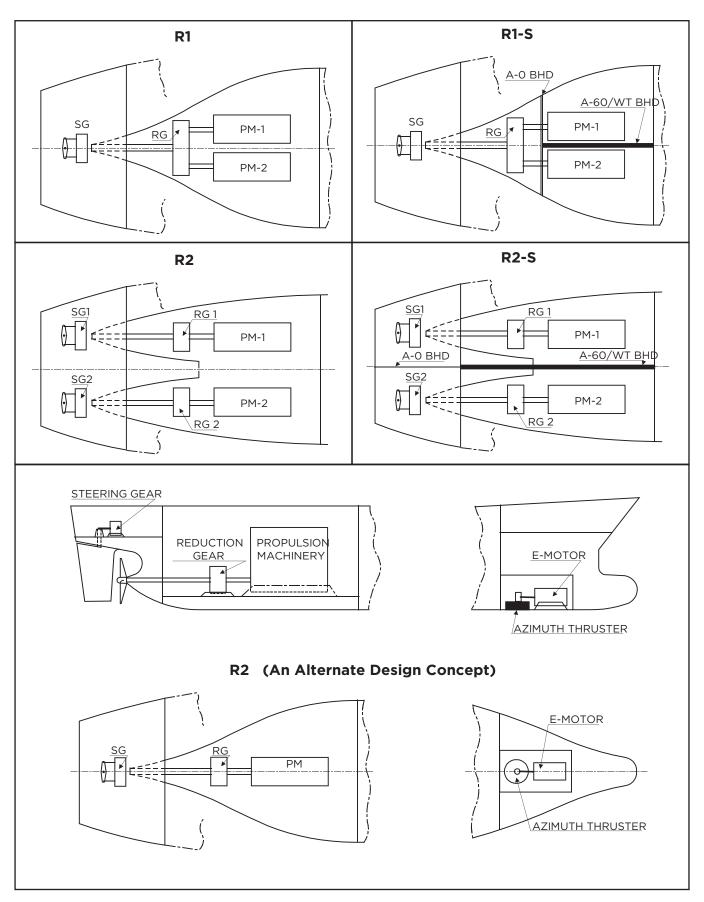

SECTION 7 - HULL CONSTRUCTION AND EQUIPMENT

STRUCTURES

Most shuttle tankers have the same structural configurations as oil tankers, as defined in the IACS Common Structural Rules for Bulk Carriers and Oil Tankers (CSR). The **CSR AB-CM** notation indicates compliance with the CSR requirements and the ABS Construction Monitoring Program. If instead the vessel was designed and built to comply with the tanker requirements in Part 5C of the ABS *Rules for Building and Classing Marine Vessels*, it may be given the **SH-SHCM** notation.

Oil Carriers may also receive the optional **FL(years)** notation if the deign fatigue life of the vessel is greater than 20 years (e.g., **FL(30)**). Shuttle tankers designed for dedicated service in a harsh environment should consider this notation.

STRUCTURAL ANALYSES

Vessels operating in a harsh environment such as the North Sea may want to consider additional structural analysis beyond that offered by the **CSR** Notation. Advanced structural analysis techniques may be employed in the hull design of a shuttle tanker. ABS recognizes the use of these methods with several notations.

The SafeHull-Dynamic Loading Approach uses an enhanced structural analysis procedure and criteria for calculating and evaluating the behavior of hull structures under dynamic loading conditions. The Dynamic Load Analysis uses a full ship model to investigate global and local structural responses. Shuttle tankers built to plans approved based on the results of such an analysis may be assigned the **SH-DLA** notation as described in the ABS *Guide for 'SafeHull-Dynamic Loading Approach' for Vessels.*

The Spectral Fatigue Analysis assist in obtaining fatigue lives greater than the minimum 20-year requirement. If the vessel is built to plans approved based on the results of Spectral Fatigue Analysis, the **SFA(years)** notation may be assigned. Please refer to the ABS *Guide for Spectral-Based Fatigue Analysis for Vessels*. As with the fatigue life notation, "years" denotes that the vessel's fatigue life is greater than 20 years.

ANCHORING

In addition to the (E) symbol, ABS offers notations to recognize special anchoring equipment or arrangements. Shuttle tankers that are 150 meters or more in length may receive the **DWA** notation if their anchor, chain, windlass, and support structure are designed for temporary mooring in unsheltered water up to 120 m with 3 knots current and wind and waves corresponding to Beaufort 6.

If a shuttle tanker has anchors of proven superior holding ability, the **RW** notation may be assigned.

HELICOPTER DECKS

Helicopter decks are not required by Class for tankers, but helicopter decks are usually required by shuttle tanker charterers in both Brazil and the North Sea. ABS offers the **HELIDK** notation for vessels fitted with helidecks. The **HELIDK** notation is assigned to helicopter decks intended for landing with no provisions for storage or refueling. For more information see the ABS *Guide for the Class Notation Helicopter Decks and Facilities* (**HELIDK** and **HELIDK(SRF)**).

HULL CONDITION MONITORING

More and more equipment is becoming available for monitoring of both hull and machinery. ABS is fully committed to working with designers, shipyards and owners to help implement and use these systems to maximize operational efficiency.

Hull monitoring systems can be used to acquire, display and/or record information and then use the information as a basis for making decisions that will improve operational efficiency and/or safety. ABS recognizes the enhanced safety aspects that can be obtained by the correct use of monitoring systems and will assign appropriate notations to any vessel fitted with a such system that complies with the requirements of the ABS *Guide for Hull Condition Monitoring Systems*.

ABS offers the following optional notations for hull condition monitoring:

Symbols	Descriptive Notations	Optional Notations*
	Slam Warning	ACS, PT
HM1	Green Seas Warning	
Motion Monitoring	Ship Motion	ACS, MOT
	Sea State	ST
	Hull Girder Stress	HS
HM2	Local Load Monitoring	LS
Stress Monitoring	Fatigue Monitor	
	LC	
	VDR	
	Enhanced VDR	
НМ3	Navigation	
Voyage Data Monitoring	Wind	WD
	Shaft Monitoring	TM, RC
	SL	

* Additional notations are followed by a digit specifying the number of sensors (or devices) installed.

A +R notation may be assigned where the shuttle tanker has provisions for recording the data for later evaluation

SECTION 8 - OTHER MACHINERY AND SYSTEMS

In addition to the machinery systems already discussed in Section 4, "Typical Class Notations", ABS also offers the following machinery related Notations for shuttle tankers.

VAPOR EMISSION CONTROL (VEC AND VEC-L)

The filling level of cargo tanks in shuttle tankers are always in flux, with tanks empty a significant amount of time. This means that a large amount of Volatile Organic Compounds is generated and must be dealt with. ABS addresses these needs through our Vapor Emission Control Notations, **VEC** and **VEC-L**, discussed below.

Vapor Emission Control (VEC) – The notation **VEC** is assigned to indicate that an oil carrier is fitted with a vapor emission control system; and that the system is in accordance with 5C-1-7/1.1.2 and 5C-1-7/21 of the ABS *Rules for Building and Marine Vessels*.

Vapor Emission Control-Lightering (VEC-L) – The notation **VEC-L** is assigned to indicate that an oil carrier is fitted with a vapor emission control system that is also suitable for use during lightering operations; and that the system is in accordance with the applicable requirements of 5C-1-7/1.2 and 5C-1-7/21 of the ABS *Rules for Building and Classing Marine Vessels.* It is common for shuttle tankers to receive the VEC-L notation since the services are similar.

ENHANCED SHAFT ALIGNMENT

This notation is assigned to shuttle tankers designed, constructed and operated in compliance with the shaft alignment procedures in ABS Guide for Enhanced Shaft Alignment.

The intention of the Guide is to address shafting arrangements, such as installations with no forward stern tube bearing, that may particularly benefit from a more detailed analysis and a more accurate and structured procedure so as to optimize the shaft alignment and improve the service life of the vessel's powertrain.

Assignment of the **ESA** Notation requires the review of plans and calculations by an ABS Engineering Office in accordance with the ABS *Guide for Enhanced Shaft Alignment*.

Assignment of the **ESA+** Notation requires the review of plans and calculations by an ABS Engineering Office and compliance with the installation, measurements and sea trials requirements, in accordance with the ABS *Guide for Enhanced Shaft Alignment*. In addition, the **ESA+** Notation requires the attendance of an ABS Surveyor during shaft alignment efforts which are in addition to regular Rule requirements, as explained in the Guide.

HIGH VOLTAGE SHORE CONNECTION SYSTEM

To improve their carbon signature, some shuttle tankers now utilize a High Voltage Shore Connection System (HVSC) to provide ship's power while in port. ABS offers the **HVSC** notation to shuttle tankers equipped with an HVSC system designed to power the vessel with shore power alone, enabling the shipboard generators to be shut down while in port. Details can be found in the ABS *Guide for High Voltage Shore Connection*.

TAILSHAFT CONDITION MONITORING

The Tailshaft Condition Monitoring (**TCM**) notation is assigned to vessels with tailshafts specifically arranged with oil-lubricated stern tube bearings, complying with the requirements of 4-3-2/13 of the ABS *Rules for Building and Classing Marine Vessels*.


This Rule Section gives requirements for:

- 1. Temperature Monitoring and Alarm
- 2. Oil Seal Design
- 3. Bearing Wear Down Measurement
- 4. Management of Monitored Data
- 5. Surveys

The Tailshaft Condition Monitoring – Water Lubricated (**TCM-W**) notation is assigned to vessels with tailshafts specifically arranged with closed or opened type water-lubricated stern tube bearings, complying with the requirements of 4-3-2/15 of the ABS *Rules for Building and Classing Marine Vessels*.

This Rule Section gives requirements for:

- 1. Bearing Material
- 2. Corrosion protection
- 3. Pumps and Piping
- 4. Control and Instruments
- 5. Management of monitored Data
- 6. Wear Down Measurement
- 7. Bearing Operating Condition
- 8. Lubricant Operating Condition
- 9. Surveys

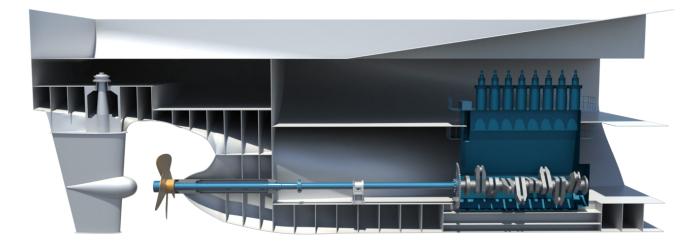

SECTION 9 - SAFETY AND HUMAN FACTORS

ABS has a strong commitment to safety and human factors. For more than 150 years, ABS has been promoting the security of life and property and preserving the natural environment.

SAFETY

ABS-ISGOTT - This notation is assigned to Oil Carriers which are provided with the supplementary equipment and arrangements specified in the ABS *Guide for Implementation of International Safety Guide for Oil Tankers* (ISGOTT). The requirements and notation identified in this Guide are optional for classification.

This Guide provides requirements for:

- 1. Cargo and Ballast Systems
- 2. Gas testing equipment
- 3. Enclosed Spaces
- 4. Shipboard operations
- 5. Surveys After Construction

ENHANCED FIRE PROTECTION

ABS Offers a full suite of Enhanced Fire Protection Notations. The Enhanced Fire Protection notations available for shuttle tankers are **EFP-A** for accommodation areas, **EFP-M** for machinery spaces; and **EFP-C** for cargo areas. Individual or combinations of the above notations can be provided.

EFP-A - This notation is assigned to shuttle tankers that have accommodation areas designed, constructed and equipped in accordance with the requirements in Chapter 1 as well as Chapter 2, Sections 1 through 5 of the ABS *Guide for Enhanced Fire Protection Arrangements*.

EFP-C - This notation is assigned to shuttle tankers and other vessel types identified in Chapter 4 of the EFP Guide that have the cargo areas designed, constructed and equipped in accordance with Chapters 1 and 4 of the ABS *Guide for Enhanced Fire Protection Arrangements.*

EFP-M - This notation is assigned to shuttle tankers that have the machinery spaces designed, constructed and equipped in accordance with the requirements in Chapters 1 and 3 of the ABS *Guide for Enhanced Fire Protection Arrangements.*

EFP-AMC - Meets EFP-A, M and C requirements.

HUMAN FACTORS

Recognizing that security of life starts with improving the safety and well-being of personnel with a clear understanding of their capabilities and limitations, ABS offers Habitability, Ergonomic, Navigation Bridge Layout and Means of Access Notations to keep your crew safe and efficient.

HABITABILITY

As discussed in the ABS *Guide for Crew Habitability on Ships*, the Habitability series of notations focuses on five (5) categories of habitability criteria that can affect task performance and can be controlled, measured, and assessed in crew work, rest, and recreation areas of ships. These categories are accommodation area, whole-body vibration (separate criteria for accommodation areas and workspaces), noise, indoor climate, and lighting.

- The HAB notation indicates that a vessel meets the basic criteria for these categories.
- The **HAB+** notation invokes more stringent accommodation area, whole-body vibration and noise criteria aimed at increasing crew comfort and safety.
- The **HAB++** notation applies even more stringent accommodation area, whole-body vibration, noise, and indoor climate criteria.

In addition to the **HAB** notation assignment, at the Owner's request, ABS may review the accommodation area design for compliance with ILO Maritime Labour Convention (MLC), 2006 Title 3 requirements and assign the **MLC-ACCOM** notation. For more information see the ABS *Guide for Compliance with the ILO Maritime Labour Convention, 2006 Title 3 Requirements.*

ERGONOMICS

With the objective of promoting ergonomically focused design and construction, ABS offers the following ergonomic notations:

- The **ERGO ES** notation is directed at assessing the human fit and compatibility of areas inside the skin of the vessel on or below the main deck. These include interior ramps, passageways, ramps hatches and scuttles, and other structures associated with crew safety and job performance.
- The **ERGO VALVE** notation is directed at assessing the access and use of operating and maintaining valves with regard to accessibility and ease of identification and use.
- The **ERGO MAINT** notation is directed at assessing the safety and ease of access to maintenance areas (maintenance platforms, access aids such as ladders, and the size of the maintenance workspace).

See the ABS Guide for Ergonomic Notations for more detailed information.

NAVIGATION BRIDGE

The requirements for the functionality of the bridge design and layout, and the navigational equipment/systems are provided in the ABS *Guide for Bridge Design and Navigational Equipment/Systems*. The requirements are intended to improve and optimize the work environment within the bridge area and enhance the navigational capabilities and safety of a vessel. The requirements for vessels fitted with an integrated bridge system for navigational purpose are also included in this Guide.

NBL - Navigational Bridge Layout (NBL) – This notation is assigned to vessels having bridges found to comply with the requirements in Sections 1 and 2 of the ABS *Guide for Bridge Design and Navigational Equipment/Systems*, as applicable, and which have been constructed and installed under ABS survey.

NBLES - Navigational Bridge Layout and Equipment/Systems (NBLES) – This notation is assigned to vessels having bridges found to comply with the requirements in Sections 1 through 3, with equipment listed in Section 3, Table 1, of the ABS *Guide for Bridge Design and Navigational Equipment/Systems*, as applicable, and which have been constructed and installed under ABS survey.


NBLES+ - Navigational Bridge Layout and Equipment/Systems Plus (NBLES+) – This notation is assigned to vessels having bridges found to comply with the requirements in Sections 1 through 3, with equipment listed in Section 3, Table 2, of the ABS *Guide for Bridge Design and Navigational Equipment/Systems*, as applicable, and which have been constructed and installed under ABS survey.

NIBS - Navigational Integrated Bridge System (NIBS) – This notation is assigned to vessels which are fitted with an integrated bridge systems (IBS) for the navigational purpose, and are found to comply with the requirements in Sections 1 through 4 of the ABS *Guide for Bridge Design and Navigational Equipment/Systems*, and which have been constructed and installed under ABS survey.

MEANS OF ACCESS

To enable physical surveys, inspections, and maintenance activities to be conducted effectively, consideration needs to be given to means of access arrangements. The ABS *Guide for Means of Access to Tanks and Holds for Inspection* discusses how the effectiveness of the design of means of access can be maximized through the application of ergonomics to the vessel's structural designs and arrangements. ABS offers two notations:

- The **PMA** notation indicates compliance with IMO Resolutions MSC.151(78) and MSC.158(78), as well as IACS Unified Interpretation (UI) SC 191.
- The **PMA+** notation may be assigned to meeting the **PMA** notation requirements plus additional ergonomic considerations specified by ABS.

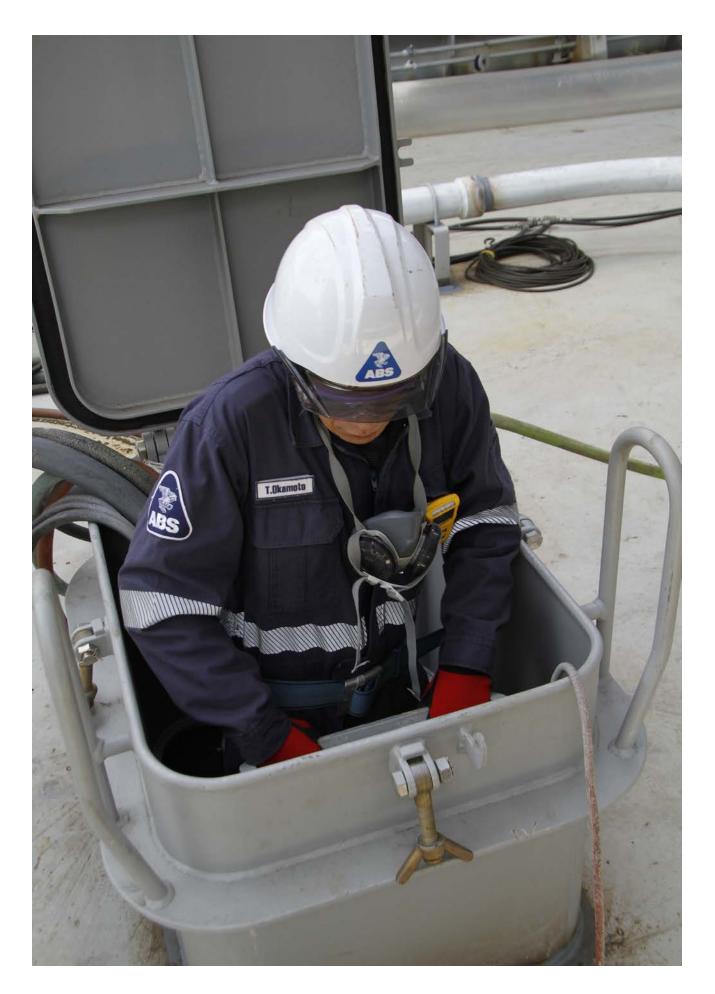

SECTION 10 - ENVIRONMENT

COLD CLIMATES

With many shuttle tankers operating in the North Sea, the Canadian east coast (offshore Newfoundland) and the Russian (Varandey, Caspian, Sakhalin and Yamal) coast there are specific considerations related to operating in cold climates that need to be considered. ABS offers Notations for Operation in Low Temperature Environments and for Ice Load Monitoring. We also offer a full suite of Ice Class Notations including Polar Class, Enhanced Polar Class, First-year Ice Class and Baltic Ice Class. See below for more information.

ICE CLASSES

ABS offers four series of Ice Class notations, as follows:

Polar Class	Polar Class, Enhanced	First-year Ice Class	Baltic Class
PC1	PC1, Enhanced		
PC2	PC2, Enhanced		
PC3	PC3, Enhanced		
PC4	PC4, Enhanced		
PC5	PC5, Enhanced		
PC6	PC6, Enhanced		IAA
PC7	PC7, Enhanced	AO	ΙA
		BO	ΙB
		CO	I C
		DO	
		EO	

Polar Class (Part 6-1-1 to 6-1-4 of the Marine Vessel Rules)

The Polar Class notations (**PC1-PC7**) indicate that the vessel is suitable for navigating independently in ice-covered Polar waters.

The Enhanced Polar Class notations (**PC1-PC7**) indicate that the vessel is suitable for navigating independently in ice-covered Polar waters and complies with additional requirements specified by ABS.

First-year Ice (Part 6-1-5 of the Marine Vessel Rules)

Ice Classes AO through EO indicate that the vessel is suitable for navigating independently in first-year ice.

Baltic Ice Class (Part 6-1-6 of the Marine Vessel Rules)

Ice Classes **I AA** through **I C** indicate that the vessel is suitable for navigating the waters of the Northern Baltic in winter. The requirements for these notations agree with the Finnish-Swedish Ice Class Rules.

OPERATION IN LOW TEMPERATURE ENVIRONMENTS

ABS also offers notations for other aspects of low temperature operation that are not typically covered by the ice class Rules. These notations are covered by the ABS *Guide for Vessels Operating in Low Temperature Environments*. Low temperature environments present numerous challenges related to operation of equipment, systems, structure, vessel maintenance and safety equipment, as well as crew performance. Vessels designed and constructed without addressing the effects of low temperatures may experience increased structural and equipment failures and nonfunctioning systems. Personnel performance will typically be reduced by the effects of low temperatures.

The following notations recognize vessels that have been designed and equipped to operate in a low temperature environment:

- **CCO (TDST, TMAT)** is a basic notation for vessels operating in a low temperature designed, constructed, and surveyed with consideration to materials, hull construction, vessel systems and machinery, safety systems, and any specific vessel requirements. The "**TDST, TMAT**" in the parentheses refer to the design service temperature and the minimum anticipated temperature in °C for which the vessel's structure and exposed machinery are designed, respectively.
- **CCO-POLAR (TDST, TMAT)** is a notation available for those vessels intended to operate in Polar Regions on a frequent basis. For ships operating in defined polar waters, the service temperature will be stated on the Polar Ship Certificate.
- (HR HOURS) notation can be appended to the CCO-POLAR (TDST, TMAT) notation to indicate that a vessel is equipped and provided with arrangements for emergency power in excess of the minimum 18 hours specified within Regulation II-1/43 of the 1974 Safety of Life at Sea Convention (SOLAS).
- **DE-ICE** is a notation available for vessels that operate occasionally in low temperatures subject to ice accretion.

Vessels receiving either the **CCO** or the **CCO-POLAR** notation will also be required to obtain the Class notation **POT** for protection of fuel and lubricating oil tanks.



ICE LOADS MONITORING

As discussed in the ABS *Guide for Ice Loads Monitoring Systems*, shuttle tankers may be assigned the following notations if they are equipped with an ice loads monitoring system intended to:

- Provide the bridge near real-time information of the measured data while transiting in ice.
- Warn the vessel's personnel that near real-time parameters are approaching permissible levels so that corrective actions may be taken.
- Warn the vessel's personnel that during the voyage the value(s) of these parameters could be equal to or higher than corresponding permissible level(s) in the near future based on recent impacts.

Notation	Definition		
ILM	Basic Ice loads Monitoring System that monitors the local ice belt stresses.		
(n)	Number of additional strain gauge locations (e.g., 2, 4 etc.)		
+T (Turning Ice Loads)	System with the additional purpose of monitoring the ice loads induced at the quarters of the vessel due to turning in ice.		
+G (Hull Girder Loads due to Ice Impact)	System for hull girder bending and shear monitoring due to operation in ice, typically ramming loads.		
+L (Recording)	System with the additional purpose of recording the stresses for analysis of ice loads		
+P (Pressure Measurement and Recording)	System with the additional purpose of measuring and recording local impact pressures		

EMISSIONS AND POLLUTION CONTROL

In keeping with ABS's mission of preserving the natural environment, there are several notations that recognize a commitment to environmental protection and pollution control.

EXHAUST EMISSION REDUCTION

With increased legislation regulating air pollution, ABS offers notations for various types of exhaust emission abatement systems, including SOx scrubbers, Selective Catalytic Reduction (SCR) systems, and Exhaust Gas Recirculation (EGR) arrangements, as well as Exhaust Emissions Monitoring Systems (EEMS). ABS has helped multiple owners develop a 2020 fuel strategy and shortlist and evaluate available scrubber solutions.

The requirements for these systems are presented in the ABS Guide for Exhaust Emission Abatement.

- The **EGC-SOx** notation may be assigned to a vessel with an exhaust gas cleaning system that uses exhaust gas scrubbing to reduce SOx emissions.
- The **EGC-SCR** notation may be assigned to a vessel with an exhaust gas cleaning system that uses Selective Catalytic Reduction to reduce NOx emissions.
- The **EGC-EGR** notation may be assigned to a vessel with an exhaust gas cleaning system separate from the engine that uses exhaust gas recirculation to reduce NOx emissions.
- The **EEMS** notation may be assigned to a vessel with a permanently installed exhaust emission monitoring system. The vessel may or may not also be fitted with an exhaust emission abatement system.

If a shuttle tanker is built with design features that permit installation of a SOx scrubber system at a future date, the **SOx Scrubber Ready** notation may be assigned. Once the vessel has undergone a complete retrofitting to install a SOx scrubber system, the **EGC-SOx** notation may be assigned.

ENERGY EFFICIENCY DESIGN INDEX (EEDI) AND THE IMO GHG STRATEGY

The regulatory requirements of MARPOL Annex VI for the Energy Efficiency Design Index (EEDI) mandate that new vessel designs achieve a minimum level of efficiency and reduction of carbon dioxide (CO₂) emissions depending on their ship type and size segment.

Compliance with the strengthened EEDI requirements has been up to now successful for certain ship types. Concerns though have been raised on the challenges for vessel designs (in particular those built using conventional technology and fuel) to meet the upcoming EEDI Phase 2 and Phase 3 levels. Furthermore, with the adoption of the IMO GHG Strategy in 2018, vessels are expected to meet the more ambitious CO₂ and GHG reduction targets set for 2030 and 2050, some of which lie beyond the reach of current technology.

ABS' thorough knowledge of international regulations coupled with industry recognized leadership on sustainability can assist ship owners, builders and designers to address compliance requirements while examining different technology alternatives. Comprehensive project assessments can include sensitivity studies to support the client's investment strategy and decision-making process.

EU MRV (MONITORING, REPORTING AND VERIFICATION) OF FUEL CONSUMPTION AND IMO DCS (DATA COLLECTION SYSTEM)

ABS was a participant in the IMO Working and Correspondence Groups during the development of the IMO DCS. More than 120 shipping companies chose ABS to assess and verify EU MRV Monitoring Plans, with ABS performing EU Verification Services for more than 4,000 vessels.

- ABS can verify that our client's CO₂ emissions inventory are in line with EU MRV and IMO DCS regulations.
- Through its easy-to-use template, ABS helps owners easily fill in the gaps between EU MRV and IMO DCS compliance.
- ABS offers additional support through its software platform, ABS Nautical Systems (NS).



ENVIRONMENTAL PROTECTION

As presented in the ABS *Guide for the Environmental Protection Notation for Vessels*, ABS also has notations aimed at promoting environmentally focused design, construction, and operation of ABS-classed vessels and preventing pollution.

• The **ENVIRO** and **ENVIRO**+ notations indicate compliance with the applicable requirements of Annexes I, II, IV, V, and VI to the International Convention for the Prevention of Pollution from Ships, MARPOL 73/78, as amended, as well as associated ABS requirements which influence environmental protection.

For the **ENVIRO+** notation, there are more stringent criteria for design characteristics, management and support systems, sea discharges, and air discharges.

HAZARDOUS MATERIALS

As discussed in the ABS *Guide for the Inventory of Hazardous Materials*, the **IHM** notation may be assigned to a vessel for which an inventory detailing the type, amount, and location of hazardous materials used in a vessel's construction and operations has been reviewed and verified by ABS. Obtaining this notation assists owners and operators in complying with Regulations 4, 5 and 10 of the Hong Kong International Convention for the Safe and Environmentally Sound Recycling of Ships, 2009 (SR/CONF/45).

PROTECTION OF FUEL AND LUBRICATING OIL TANKS

The Protection of Fuel and Lubricating Oil Tanks (**POT**) notation is assigned to shuttle tankers having an aggregate fuel oil capacity of 600 m³ (21,190 ft³) and above with fuel oil and lubricating oil tanks arranged in accordance with the requirements specified in 4-6-4/17.5 of the ABS *Rules for Building and Classing Marine Vessels*.

NOISE CONTROL

Recent regulatory initiatives have been aimed at the reduction of underwater radiated noise from ships to address concerns about the underwater noise pollution affecting marine life and habitats. ABS supports these efforts by offering the **UWN (T), UWN (Q), UWN+ (T)** and **UWN+ (Q)** notations. The **UWN+ (T)** and **UWN+ (Q)** notations require compliance with stricter sound pressure level limits. **T** indicates Transit condition, and **Q** indicates Quiet Operation condition, which is a low-speed operation condition for a vessel operating in environmentally sensitive areas. See the ABS *Guide for the Classification Notation Underwater Noise* for more information.

SECTION 11 - ADDITIONAL SURVEY AND INSPECTION CONSIDERATIONS

HULL INSPECTION

The **HIMP** (Hull Inspection and Maintenance Program) notation signifies that the vessel is enrolled in the Hull Inspection and Maintenance Program in accordance with the ABS *Guide for Hull Inspection and Maintenance Program*.

UNDERWATER INSPECTION IN LIEU OF DRYDOCKING

The **UWILD** (UnderWater Inspection in Lieu of Drydocking) notation signifies that the vessel follows Appendix 7-A-1 of the ABS *Rules for Survey After Construction (Part 7)* and the Owner may request Underwater Inspection as an alternative to Drydocking Inspection. This notation is not applicable to vessels 15 years of age or over and subject to the Enhanced Survey Program (ESP).

CONDITION ASSESSMENT PROGRAM (CAP)

CAP is a voluntary program, initially developed by the oil industry, to assess the continued fitness of older ships to carry their cargo safely. CAP involves a detailed survey, including gauging of the vessel's structure and a sophisticated strength and fatigue engineering analysis. It also includes extensive testing of the vessel's machinery, equipment and cargo systems. A CAP rating is assigned to the vessel. A CAP 1 (Very Good) or CAP 2 (Good) rating is required by most charterers. Both of these ratings suggest that the vessel has been maintained to a standard in excess of Classification Society and Statutory minimums. CAP is very common for tankers aged 15 years and above.

PROCESS

CAP involves a detailed survey including:

- Gauging of the vessel's structure
- · Strength and fatigue engineering analysis
- Testing of the vessel's machinery, equipment and cargo systems

BENEFITS

- Less time off hire
- Close-up survey of cargo and ballast spaces
- Targeted maintenance and lower life cycle repair costs
- Comprehensive, cost effective fatigue and strength assessment
- Projected structural performance for up to five years
- · Comprehensive management of structural failure risk through identification of critical areas
- · Recommendations for enhancement of critical areas
- More effective identification of required steel replacements through dynamic-based structural evaluation, including fatigue assessment

PREVENTATIVE MAINTENANCE PROGRAM (PMP)

The intent of a Preventative Maintenance Program is for owners/operators to maintain their vessel with updated machinery maintenance practices, which may increase a vessel's reliability and/or operational availability. Maintenance is to be carried out on the basis of intervals between overhauls recommended by manufacturers, documented operator's experience and/or results from a Condition Monitoring plan, where applied.

The notations below provide alternatives to the traditional "open and inspect" survey regime and are assigned to vessels that follow the requirements for the Preventative Maintenance Program in the ABS *Rules for Survey After Construction (Part 7).*

In order to qualify for a notation assigned under the Preventative Maintenance Program requirements, a vessel is required to be assigned with a **PMP** notation.

Plan	Definition	ABS Notation
Preventative Maintenance Program (PMP) (see 7-A-14)	 A program that consists of Planned Maintenance and/or Condition Monitoring. Planned Maintenance (PM) - A maintenance plan which uses time-based inspection, part replacement and/or overhauls to prevent equipment failures. Timing can be based on calendar days, number of cycles, equipment running hours, fuel consumption, or alternate periodic trigger. Such schedules are generally established by the machinery manufacturer and include lubrication servicing; filter, bearing and seal replacements; as well as major overhaul. Condition Monitoring (CM) - The use of various technologies to determine the condition of equipment, at a specific moment in time, using minimal or non-invasive means. Common approaches applied in condition monitoring are temperature monitoring, nondestructive testing (ultrasonic analyses, acoustic emissions), electrical testing, observation and surveillance, performance trending, engine and system performance trending and diagnostics. The PMP notation indicates less than 50% of all classed equipment is enrolled into this program. The PMP+ notation indicates 50% or greater of the equipment is enrolled. Maintenance intervals and tasks follow OEM recommendations or documented operator experience. 	PMP or PMP+
Condition Based Maintenance (CBM) (see 7-A-14/18)	A maintenance plan, conducted on a frequent or real-time basis, which is based on the use of Condition Monitoring to determine when part replacement or other corrective action is required. This process involves establishing a baseline and operating parameters, then frequently monitoring the machine and comparing any changes in operating conditions to the baseline. Repairs or replacement of parts are carried out before the machinery fails based upon the use of the tools prescribed for CM.	PMP-CBM
Design for Reliability (DFR)	Design for reliability (DFR) utilizes reliability/risk analysis tools so that future reliability-related performance meet expectations. It also provides a structure for applying these reliability/ risk analysis tools throughout the design process to provide the information needed by the operator to make more informed design decisions. ** DFR requires the addition of a reliability based or reliability centered maintenance program.	PMP-RBMD or PMP-RBMD+ and PMP-RCMD or PMP-RCMD+
Reliability Based Maintenance (RBM)	A maintenance development process that will act as the foundation for applying selective reliability techniques, choosing and deploying a maintenance plan, and creating an effective reliability strategy to support an efficient maintenance environment.	PMP-RBM or PMP-RBM+
Reliability Centered Maintenance (RCM)	 A process that is used to determine the most effective approach to maintenance. It involves identifying actions that when taken will reduce the probability of failure and which actions are most cost effective. ABS has developed a maintenance program which uses RCM analysis of installed equipment to develop a Preventative Maintenance Program (PMP), a spare parts holdings list and includes a sustainment plan. Reactive Maintenance – A RCM maintenance strategy in which equipment is run until failure before corrective action is taken. This is useful for items which are low-cost and have no impact on operational, environmental or safety concerns as a result of failure. One-Time Change – A RCM maintenance strategy in which equipment or systems, that have been determined to present an unacceptable level of risk and have no potential mitigations, are replaced or significantly altered in order to provide an acceptable level of risk. 	PMP-RCM or PMP-RCM+

REMOTE SURVEYS

ABS offers remote execution of surveys with verification through transfer of digital documentation. Inputs include:

- Documentation/reports
- Images
- Video
- Near real-time video feeds

The following Surveys are eligible for the program:

- Tailshaft surveys
- Continuous Machinery surveys
- Minor Damage surveys
- Rectification of Outstanding Recommendations and Outstanding Deficiencies (OSRs and OSDs)



SECTION 12 - NEW TECHNOLOGIES

LOW CARBON SHIPPING OUTLOOK

The ABS publication, *Setting the Course to Low Carbon Shipping Outlook*, illuminates potential pathways to low-carbon shipping. Its purpose is to inform by concisely organizing current knowledge on the technologies and issues that could help to reduce greenhouse gas (GHG) emissions from shipping.

A better understanding of existing technologies and strategies can help the maritime industry reach the International Maritime Organization's (IMO) GHG targets for 2030. The even more ambitious emissions goals set for 2050, however, lie beyond the reach of current technology. To achieve those goals, new technology (including fuels) will need to be developed, with the main thrust of research and innovation occurring before 2030, giving any new products and ideas time to develop and mature.

GAS AND OTHER LOW FLASHPOINT FUELS

The marine industry faces a number of substantive challenges, mostly driven by increasingly strict gaseous air emission and global warming legislation, and also from the shift in global energy markets towards renewable energy. The ABS *Advisory on Gas and Other Low Flashpoint Fuels* focuses on LNG and other low flashpoint fuels that can provide solutions to the fuel sulfur regulations in the short and mid-term, and in some cases viable solutions for the longer-term transition to low and zero carbon fuels. Information is provided on the regulatory background for the use of LNG and other low flashpoint fuels, and an overview of the technologies and operational impacts is also given that can support the decision-making process for future ship propulsion arrangements and fuel strategies.

HYBRID POWER SYSTEMS


The ABS Advisory on Hybrid Electric Power Systems discusses the use of electric propulsion systems as an alternative to traditional diesel propulsion systems. An electric propulsion system allows for the propulsion capability of the vessel to be provided by electric propulsion motors. These propulsion motors may be supplied by a common set of generators that also supply the vessel hotel loads.

One of the main benefits of electric propulsion systems is the ability to optimize the loading of the prime movers for the generators (diesel engines, gas turbines, etc.) to obtain maximum efficiency and reduce fuel consumption. This is especially beneficial in vessels with a diverse operational profile (such as DP vessels where a typical operational profile is divided between transit and station keeping operations). Generators and electric motors for propulsion offer greater flexibility in the utilization of onboard space than main engines.

ENERGY STORAGE SYSTEMS

ESS-LiBATTERY - This notation is assigned to vessels designed, constructed, or retrofitted with a lithium battery system used as an additional source of power with a capacity greater than 25 kWh complying with the requirements of the ABS *Guide for Use of Lithium Batteries in the Marine and Offshore Industries*.

ESS-SC - This notation is assigned to vessels designed, constructed, or retrofitted with a supercapacitor system used as an additional source of power with a capacity greater than 50 Wh complying with the requirements of the ABS *Guide for Use of Supercapacitors in the Marine and Offshore Industries*.

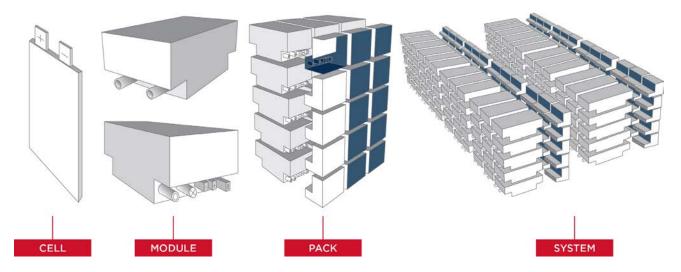

DC POWER DISTRIBUTION

LVDC-DIST - An optional notation applicable to vessels designed, constructed, or retrofitted with a DC power distribution system, where electrical power sources, vessel major loads, and/or energy storage systems are connected to the DC bus directly or via power electronic converters, and that comply with the requirements of the ABS Guide for Direct Current (DC) Power Distribution Systems for Marine and Offshore Applications.

CYBERSAFETY



With the increasing digitization and automation in marine applications, new cyber-related threats and vulnerabilities are being exposed. The ABS CyberSafety® program and capability development model provides a method for shuttle tanker owners and operators to assess their relative risk, understand potentially unmet security requirements and define a Cybersecurity Management System (CMS) outline that addresses risk and security requirements.

CS1, **CS2**, **CS3** - These notations are assigned to vessels that comply with ABS requirements contained in the ABS *Guide for Cybersecurity Implementation for the Marine and Offshore Industries – ABS CyberSafety® Volume 2* and is available for all classed vessels complying with the IMO International Safety Management (ISM) Code. ABS CyberSafety® verification will address systems critical to human, vessel, system or environmental safety and will be detailed in a verification plan. Non-safety-related connected control systems or information systems and non-safety-related functions of the connected equipment are not included in the Notation unless detailed in the verification plan. The **CS** notation may be assigned as follows:

- CS1 Standard Cybersecurity Implementation
- CS2 Enhanced Cybersecurity Implementation
- CS3 Special Cybersecurity Implementation

CS Ready – This notation is intended for newly constructed assets and requires that the shipyard provide documentation to make it easier for the owner to obtain a **CS1** Notation after delivery. It is assigned to vessels that comply with ABS requirements contained in Section 8 of the ABS *Guide for Cybersecurity Implementation for the Marine and Offshore Industries – ABS CyberSafety® Volume 2.*

SOFTWARE SYSTEMS

SQM, **ISQM** - Classification notations indicating compliance with the procedures and criteria given in the ABS *Guide for Integrated Software Quality Management (ISQM)* for control system software development from the concept phase or Design Group to the end of the Verification, Validation and Transition phase, subsequently leading to the beginning of operation of the affected system.

ISQM is for integrated control systems and SQM is for non-integrated control systems.

SSV - This notation is assigned to ABS classed vessels with standalone or integrated computer-based control systems complying with the procedures and criteria of the ABS *Guide for Software Systems Verification – ABS CyberSafety® Volume 4.* The **SSV** Notation applies only to the software of the equipment's control system that are included in the ABS reviewed Verification Plan. The connected control systems and functions of the connected equipment are not included in the notation unless detailed in the verification plan.

SMART VESSELS

Smart Functions, which provide crew and support personnel with key information to aid in decision-making, are becoming increasingly common on board vessels. Common Smart Functions include structural and machinery health monitoring, asset efficiency monitoring, operational performance management, and crew assistance and augmentation to support vessel operations.

Smart Functions are enabled via a data infrastructure and supported by robust software integrity and cybersecurity that facilitate the use of aggregated data from sensors and other sources, data analytics, and data synthesis for reporting, decision-making and actions.

ABS recently introduced the *Guide for Smart Functions for Marine Vessels and Offshore Units* to provide the industry with technical and survey requirements for vessels fitted with Smart Functions. Compliance with the requirements given in this Guide may result in the granting of optional class notations **SMART (INF)** covering the data infrastructure, as well as **SMART (SHM)** and/or **SMART (MHM)** covering the Smart Functions for health monitoring of structures or machinery.

This Guide further describes the ABS process to approve technology and services offered in support of Smart Function implementation. Approval by ABS of external service providers includes third party organizations that support Smart Function implementation, Original Equipment Manufacturers (OEMs), shipyards, owners, and operators. The Product Design Assessment (PDA) option may also be offered to any party providing hardware and software meeting the requirements within this Guide.

This Guide allows for the use of the data and decision-making support provided by the Smart Functions to assist Surveyors in performing onboard activities. Onboard equipment or systems having Smart Function capability can be considered for implementation within Condition Based Class (CBC).

This Guide is meant to be used together with the ABS *Guidance Notes on Smart Function Implementation*, which provides ABS clients with the procedures for setting goals and deciding on the Smart Functions needed to achieve these goals, as well as the Rules and Guides issued by ABS and other recognized International, National, and Industry Regulations and Standards.

DIGITAL SOLUTIONS

ABS has platforms such as Nautical Systems and the soon to be released Freedom that are cloud-based and accessible worldwide. These platforms also have built-in data management capabilities that facilitate use of the curated data for further analytics and digital applications.

Connected Assets	Data Analytics	Digital Applications	
• Nautical Systems	Cloud and AI Platform	Anomaly Detection	
• Freedom	Analytics Platform	Spare Parts Optimization	
	Orchestration Managers	Predictive Maintenance	
	• Data Layer	Condition-Based Maintenance	
		Vessel Performance	
RELIABILITY TRACKING Visual analytics for failure events trending	RELIABILITY RISKS Reliability benchmark for critical components	ANOMALY DETECTION Predictive identification of anomalies and potential failures	
PMP OPTIMIZATION Maximizing opportunities to credit open-and-inspect Class S	urveys DATA QUALITY Detect data quality issues in real-time and batch time-series data	AIS/METOCEAN Access to vessel-specific route and metocean hindcast data	



THICKNESS MEASUREMENT

Streamlining gauging process to achieve Class compliance and aid survey planning

APPENDIX A - REFERENCES

- 1. ABS Rules for Building and Classing Marine Vessels (Pub# 3)
- 2. ABS Guide for Ballast Water Exchange (Pub# 171)
- 3. ABS Guide for Ballast Water Treatment (Pub# 187)
- 4. ABS Guide for Certification of Lifting Appliances (Pub# 152)
- 5. ABS Guide for Spectral-Based Fatigue Analysis for Vessels (Pub# 125)
- 6. ABS Guide for 'SafeHull-Dynamic Loading Approach' for Vessels (Pub# 140)
- 7. ABS Guide for the Class Notation Helicopter Decks and Facilities (HELIDK and HELIDK(SRF)) (Pub# 213)
- 8. ABS Guide for Hull Condition Monitoring Systems (Pub# 73)
- 9. ABS Guide for Enhanced Shaft Alignment (Pub# 218)
- 10. ABS Guide for High Voltage Shore Connection (Pub# 182)
- 11. ABS Guide for Dynamic Positioning Systems (Pub# 191)
- 12. ABS Guide for the Class Notation for Bow or Stern Loading and Unloading (BLU or SLU) for Oil Carriers, Liquefied Gas Carriers or Chemical Carriers (Pub# 212)
- 13. ABS Guide for Implementation of International Safety Guide for Oil Tankers (ISGOTT) (Pub# 222)
- 14. ABS Guide for Enhanced Fire Protection Arrangements (Pub# 202)
- 15. ABS Guide for Crew Habitability on Ships (Pub# 102)
- 16. ABS Guide for Compliance with the ILO Maritime Labour Convention, 2006 Title 3 Requirements (Pub# 166)
- 17. ABS Guide for Ergonomic Notations (Pub# 201)
- 18. ABS Guide for Bridge Design and Navigational Equipment/ Systems (Pub# 94)
- 19. ABS Guide for Means of Access to Tanks and Holds for Inspection (Pub# 154)
- 20. ABS Guide for Vessels Operating in Low Temperature Environments (Pub# 151)
- 21. ABS Guide for Ice Loads Monitoring Systems (Pub#178)
- 22. ABS Guide for Exhaust Emission Abatement (Pub# 204)
- 23. ABS Guide for the Environmental Protection Notation for Vessels (Pub# 99)
- 24. ABS Guide for the Inventory of Hazardous Materials (Pub# 158)
- 25. ABS Guide for the Classification Notation Underwater Noise (Pub# 295)
- 26. ABS Guide for Use of Lithium Batteries in the Marine and Offshore Industries (Pub# 275)
- 27. ABS Guide for Use of Supercapacitors in the Marine and Offshore Industries (Pub# 288)
- 28. ABS Guide for Direct Current (DC) Power Distribution Systems for Marine and Offshore Applications (Pub# 293)
- 29. ABS Guide for Cybersecurity Implementation for the Marine and Offshore Industries ABS CyberSafety® Volume 2 (Pub# 251)
- 30. ABS Guide for Integrated Software Quality Management (ISQM) (Pub# 185)
- 31. ABS Guide for Software Systems Verification ABS CyberSafety® Volume 4 (Pub# 253)
- 32. ABS Guide for Hull Inspection and Maintenance Program (Pub# 156)
- 33. ABS Guide for Smart Functions for Marine Vessels and Offshore Units (Pub# 307)
- 34. ABS Guidance Notes on Smart Function Implementation (Pub# 304)
- 35. ABS Setting the Course to Low Carbon Shipping Outlook (Available on eagle.org under News/Press Room)
- 36. ABS Advisory on Gas and Other Low Flashpoint Fuels (Available on eagle.org under Products and Services/Gas/ Gas as Fuel)
- 37. ABS Advisory on Hybrid Electric Power Systems (Available on eagle.org under News & Events/Publications/ Advisors & Debriefs)
- 38. Notice 140 Norwegian Oil and Gas Recommended Guidelines for Offshore Loading Shuttle Tankers available at www.norskoljeoggass.no

CONTACT INFORMATION

NORTH AMERICA REGION

1701 City Plaza Dr. Spring, Texas 77389, USA Tel: +1-281-877-6000 Email: ABS-Amer@eagle.org

SOUTH AMERICA REGION

Rua Acre, nº 15 - 11º floor, Centro Rio de Janeiro 20081-000, Brazil Tel: +55 21 2276-3535 Email: ABSRio@eagle.org

EUROPE AND AFRICA REGION

111 Old Broad Street London EC2N 1AP, UK Tel: +44-20-7247-3255 Email: ABS-Eur@eagle.org

MIDDLE EAST REGION

Al Joud Center, 1st floor, Suite # 111 Sheikh Zayed Road P.O. Box 24860, Dubai, UAE Tel: +971 4 330 6000 Email: ABSDubai@eagle.org

GREATER CHINA REGION

5th Floor, Silver Tower No. 85 Taoyuan Road, Huangpu District Shanghai 200021, P.R. China Tel: +86 21 23270888 Email: ABSGreaterChina@eagle.org

NORTH PACIFIC REGION

11th Floor, Kyobo Life Insurance Bldg. 7, Chungjang-daero, Jung-Gu Busan 48939, Korea, Republic of Tel: +82 51 460 4197 Email: ABSNorthPacific@eagle.org

SOUTH PACIFIC REGION

438 Alexandra Road #08-00 Alexandra Point, Singapore 119958 Tel: +65 6276 8700 Email: ABS-Pac@eagle.org

© 2019 American Bureau of Shipping. All rights reserved.

